

Nexus and Sonos Voice Sounders



Standard Default Messages

Sonos Voice Sounder

- EV1 Fire! Fire! Please leave the building. Fire! Fire! Leave the building.
- EV2 In the interest of safety, please evacuate the building immediately.
- EV5 Attention! Attention! This is a fire emergency. Please evacuate the building.

Sonos Multi Message Voice Sounder

- GS1 Attention, attention. 1st Stage extinguishing system alarm. Action required.
- GS2 Attention, attention. 2nd stage extinguishing system alarm. Extinguishing system release imminent. Please evacuate the area.
- GS3 Attention, attention. Extinguishing system hold-off device operated. Extinguishing system release on hold.
- GS4 Attention, attention. Extinguishing system has discharged. Do not enter.

Nexus Voice Sounders (AC and DC models)

- AL2 There is an emergency. Await further instructions.
- EV11 We have an emergency situation. Please leave the building by the nearest exit immediately.
- AC1 All clear. All clear. No further action required.
- TE3 Alarm test only. No action required.

Nexus Gas Extinguishant Voice Sounder

- GS1 Attention, attention. 1st Stage extinguishing system alarm. Action required.
- GS2 Attention, attention. 2nd stage extinguishing system alarm. Extinguishing system release imminent. Please evacuate the area.
- GS3 Attention, attention. Extinguishing system hold-off device operated. Extinguishing system release on hold.
- GS4 Attention, attention. Extinguishing system has discharged. Do not enter.